

**Would
you
clean
your face**

**with
ordinary
toilet paper?**

... your answer: Never!



But what does this question aim at? We would like to draw your attention to the amazing fact that nowadays in the revolutionary epoch of the rockets and satellites, in certain things we are still very backward.

This concerns for instance the care of our body after using the water closet. It goes with itself that we wash our hands. But is it not a paradox to do one thing and at the same time to neglect the other, much more important one; that is to say the unobjectionable cleansing of the anal organs?

Closomat puts an end to this problem in a most hygienic way by means of warm water and warm air.

Persons who had been suffering for many years from itching, chapped and irritated skin, eczemas or haemorrhoids were completely healed already short time after they started to use Closomat regularly. Thanks to Closomat, feminine hygiene, especially during menstruation, is now possible in a much better and hygienic way.

We wonder why it is just this part of the body that in spite of its important function, is being neglected incredibly? Is it laziness or indifference? No, it is unconscious backwardness!

Closomat breaks once for ever with this old method of cleansing. What to-day in case of Closomat is considered as being unnecessary or unimportant,

to-morrow is self-evident and natural for everybody!

Never again there will be dirty undergarments, the horror of all housewives – this belongs all to the past!

Closomat is a must for the good private house, for the hotel constructed according to progressive conceptions, for all modern works, especially that ones of the alimentary industry, for hospitals and homes for the aged.

closomat


- a Closet body of «Argovit-Kera» porcelain, with direct flushing; flushing cistern of porcelain bolted to the bowl.
- b Closet seat and cover of black or white thermosetting plastic.
- c Warm air unit blower with fractional h.p. motor 2500 R.P.M., noiseless.
- d Warm water heater, capacity 2 litres, container of copper with 3 thermostats, one of them serving as excess temperature cut-out. Maximum temperature of the water individually adjustable.
- e Pressure unit, high-capacity gear type pump, 56.9 p. s. i. (4 atm.) with fractional $\frac{1}{4}$ h. p. motor, water seal requires no attention. Lubrication by water.
- f Electrical data: 220 v (110 v on request), 1500 w, mains connection by earthing plug or direct circuit breaker to all poles.

Water connection: Ball valve $\frac{3}{8}$ " gas.
The other sanitary connections are the same as that ones for a conventional water closet.
No warm water connection.

Patents in 15 countries.

Tested and approved by the Waterworks Authorities of Zürich, Düsseldorf and Stockholm.

Electrotechnical tests: SEV Zürich, ETVA Vienna, SEMKO Stockholm.

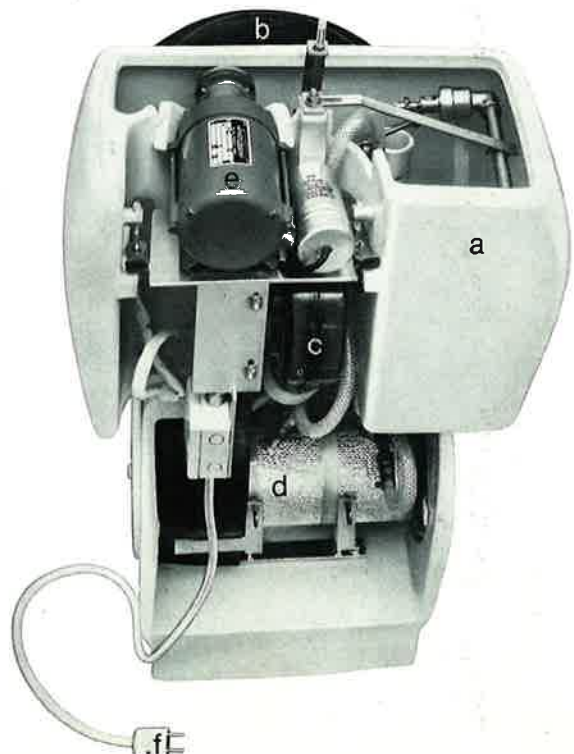

Mode of operation

clos o mat



- a) Foot button for automatic operation.
- b) Shower unit: construction giving full protection against any soiling by feces. All parts are of stainless and chromium plated material.
- c) Warm air channel.
- d) Hand button for operating the conventional closet flushing.



Mode of Operation of the Douche

The douche is operated in seated position by pressing the foot button. Simultaneously with this cleaning operation the normal flushing of the closet takes place. The douche sprays water of body temperature for about 15 seconds, then the temperature of the water decreases gradually. The douching can be extended at will. Thanks to this alternating douche, excellent healing results are obtained in case of the various ailments of the anal organs such as itching, irritation, eczema, fistulas and haemorrhoids. Since the nozzle does never come into contact with the body, the spreading of contagious diseases as for instance worms, typhus, paratyphus, dysentery and so on is excluded.

Mode of Operation of the Warm Air

When the foot button is released, the douche stops and the warm air supply of body temperature, which dries in a gentle manner, is automatically turned on. Clos o mat is ready for re-use after 2½ minutes.



How our Customers express Their Enthusiasm

A surgeon: ... it is astonishing that the modern human being resigned himself to the fate of the cleansing with paper and the use of the hands. The new principle of cleansing is perfect and together with the warm air flow acts prophylactically and therapeutically against eczemas, skin irritations, haemorrhoids and so on.

A druggist: ... that I am very satisfied with clos o mat and would in no case renounce to it. Clos o mat has been giving unobjectionable performance for two years now. For the woman it replaces absolutely the bidet. Clos o mat gives the sense of perfect feminine hygiene, particularly during menses. Since I am using clos o mat, all troubles of the anal region have disappeared.

A tradesman: ... I have been suffering from haemorrhoids for many years which forced me to choose this particularly hygienic system of cleansing. The apparatus met all expectations. You get full equivalent for the high expenses. We wish the inventor every success.

An industrialist: I believe that I was among the first who purchased a clos o mat equipment. I have had installed it in 1959. The particular advantages of clos o mat induced me very soon to order a second one. The reason for my decision lies in the perfect and hygienic cleansing, which in my opinion cannot be reached by any other system.

A master-joiner: We have been using clos o mat for one year now and are fully satisfied with this system of perfect personal hygiene. We appreciate it particularly that clos o mat not only replaces the bidet for feminine hygiene, but gives much better service to women. Fully hygienic cleansing and never expected results in the care of the health made us soon forget the expenses for clos o mat.

A manufacturer: We are happy owners of clos o mat and use this revolutionary invention with enthusiasm. ... should be missed in no home. Without exception our guests are filled with enthusiasm for clos o mat. We are proud to possess clos o mat.

A farmer: ... we have had installed clos o mat in both flats. Now that we realize the high hygienic value of clos o mat, we can say that it paid us to incur the expenses for clos o mat. Thanks to the fully hygienic attention given by clos o mat, within short time, diseases of the anal region disappeared forever.

An architect: ... I am filled with enthusiasm for clos o mat. I did not bother about the costs I would have to incur for clos o mat and have had installed one also in my country house in the Ticino. My guests who at the beginning laughed at clos o mat, after having used it, changed suddenly their mind and without exception appreciated its hygienic value. Two of my guests have already provided their homes with clos o mat.



A physician: Your clos o mat is an indispensable device for me and for my numerous family. In my consultations I recommended with success clos o mat to persons suffering from haemorrhoids and other anal inconveniences.



K = cold water connection: angle valve $\frac{3}{8}$ " or $\frac{1}{2}$ " chromium plated, copper connection pipe in 8x10 mm or 10x12 mm chromium plated.

E = electrical socket with earth connection 220V/10A (110V/15A) on the right side.

Type
61

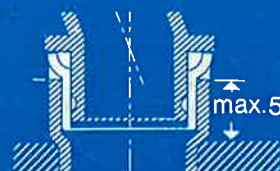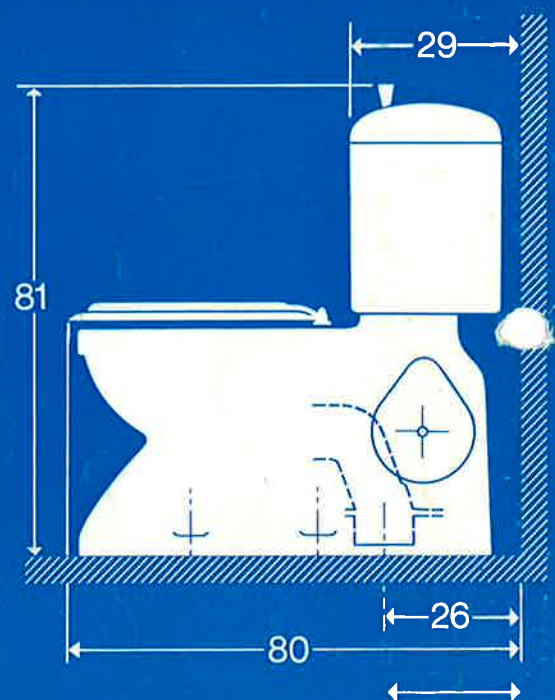

Soil-connection with special plastic-socket Geberit No. 49.110 (can be delivered) Cast iron pipe 4"

clos o mat 61

Hans Maurer Construction of Sanitary Apparatuses
Zollikerberg-Zurich (Switzerland) Rietholzstrasse 6 ϕ 051 / 63 60 18